


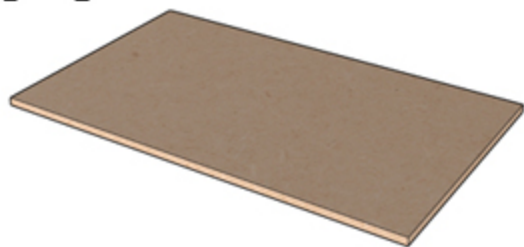


A




Lay panel A on a flat sturdy surface.

B

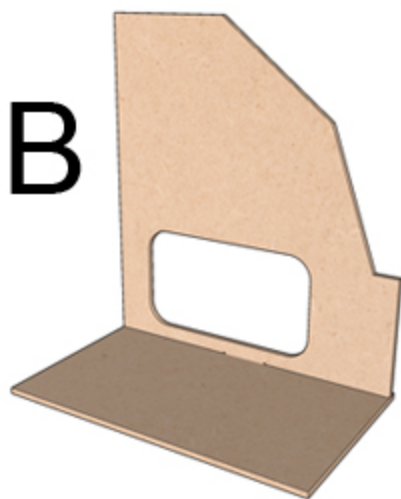


Do not screw together until all panels have been placed into position.

C

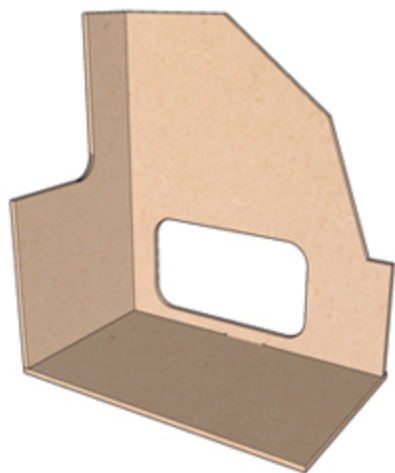


Locate rest of panels into their corresponding positions.

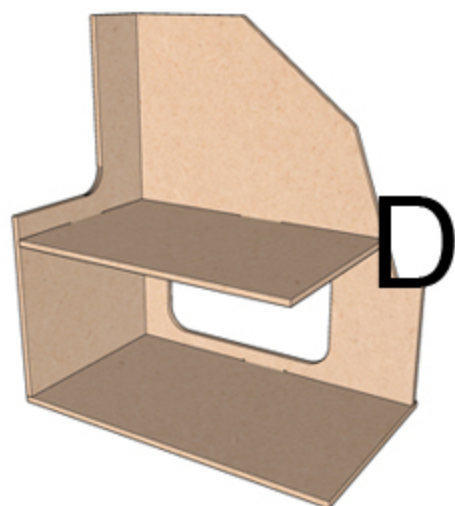

Nudge panels into position so all panels are correctly aligned. Then screw panels together making sure not to over tighten screws.




A

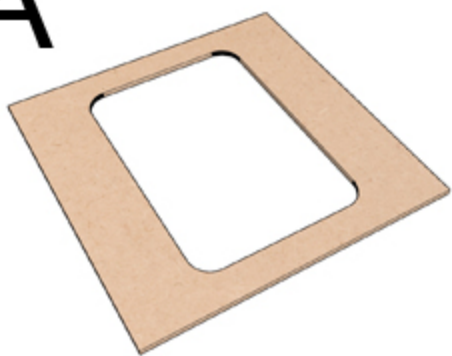


Lay panel A on a flat sturdy surface.

B

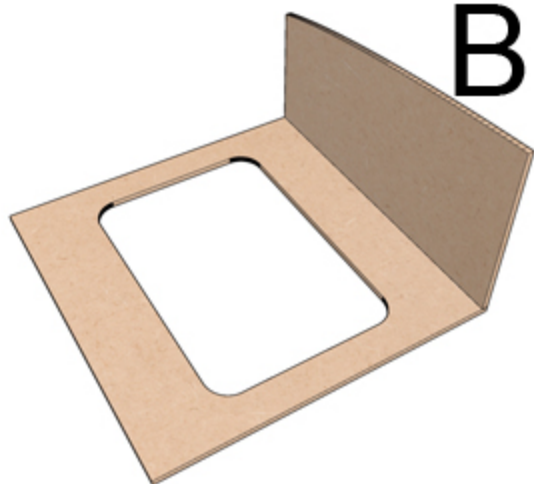


Do not screw together until all panels have been placed into position.

C

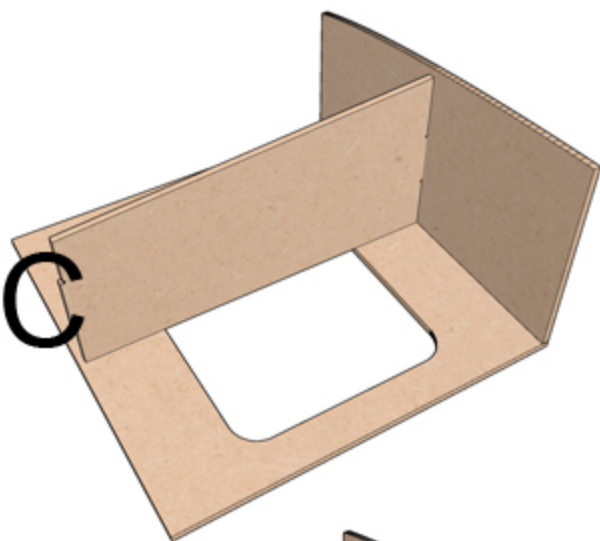

Locate rest of panels into their corresponding positions.

D

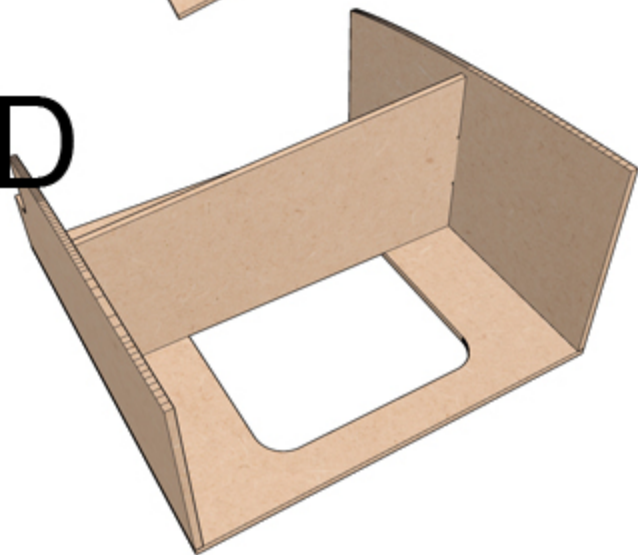

Nudge panels into position so all panels are correctly aligned. Then screw panels together making sure not to over tighten screws.