



Please read this carefully.

All panels need to be treated with care.

Before assembly fit door hinges as shown in video on the download page of website. [www.mgdesign.biz](http://www.mgdesign.biz)

Assemble unit as far as you can without screwing together to allow fine adjustment of panels for a perfect fit.


Panels may require some sanding/finishing so it is recommended that you dry fit panels together first.

Assemble on a flat surface and check panels regularly making sure they are sitting square with adjacent panels.

Trial fit unit into van before finishing as some trimming may be required.




**A**

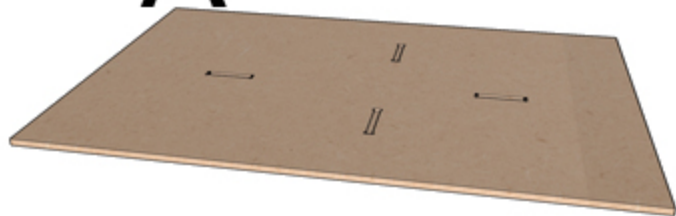


Lay panel A on a flat sturdy surface.


**B**

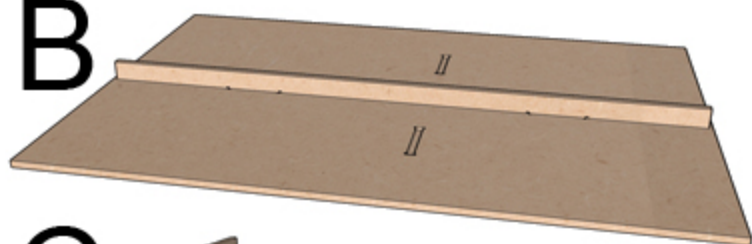

**C**

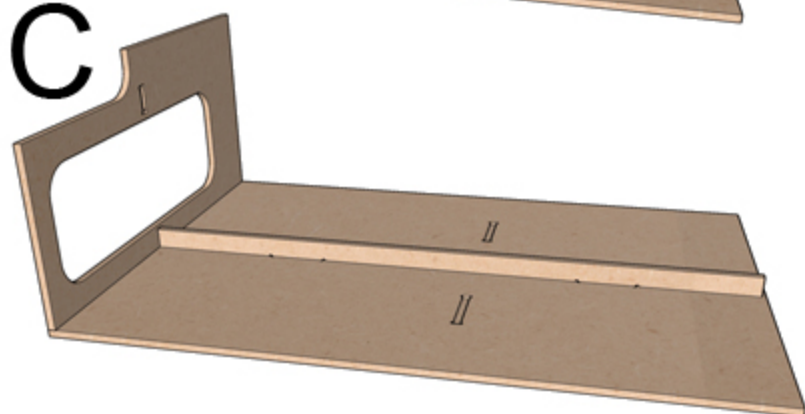


Do not screw together until all panels have been placed into position.




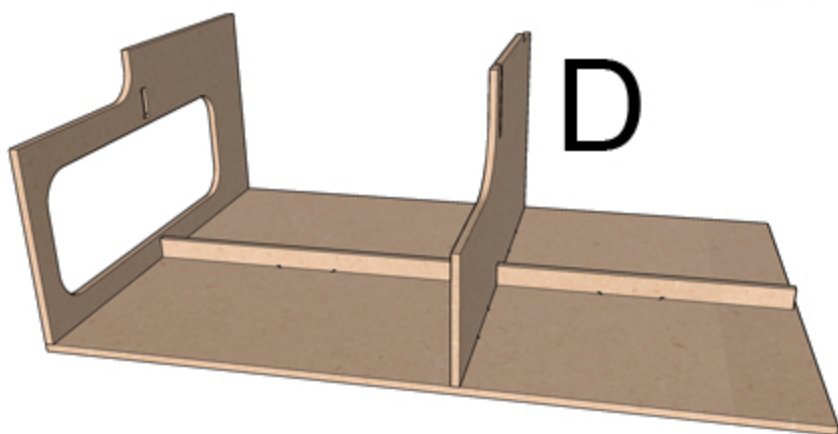


**D**

Locate rest of panels into their corresponding positions.

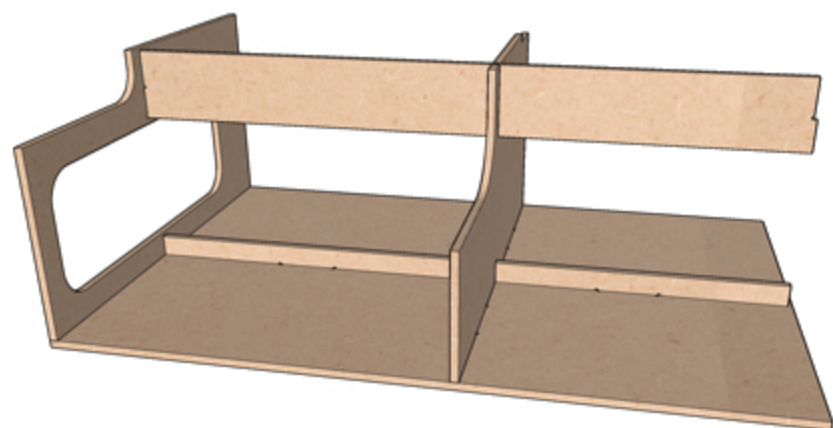

**E**

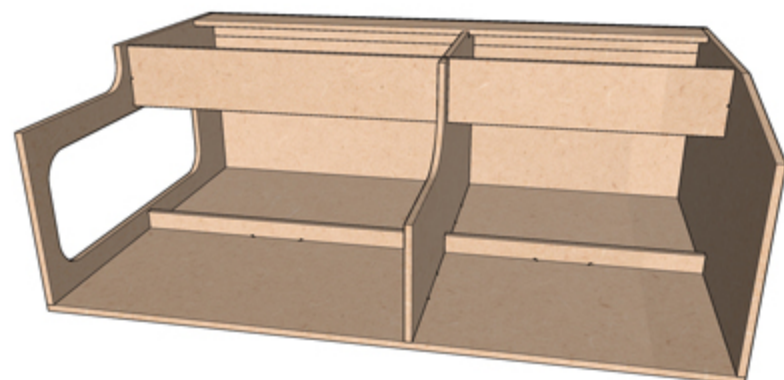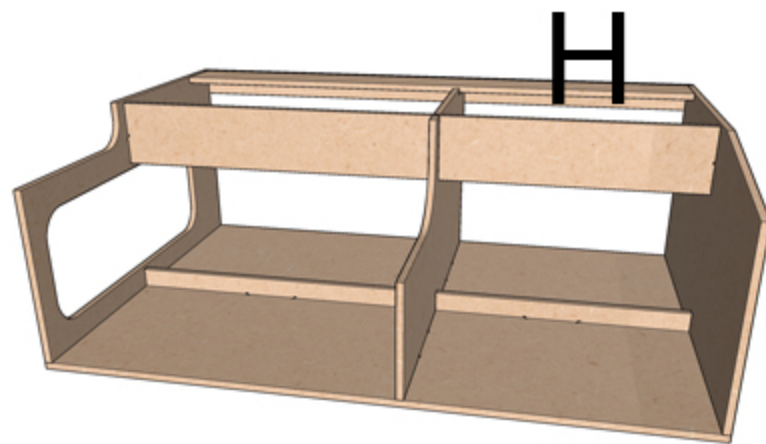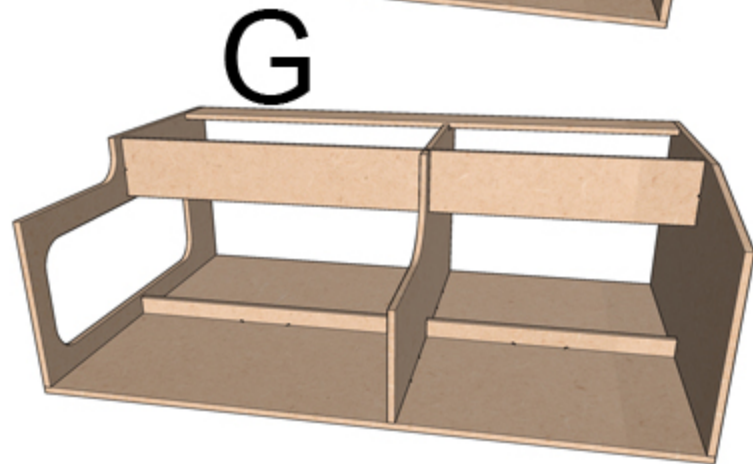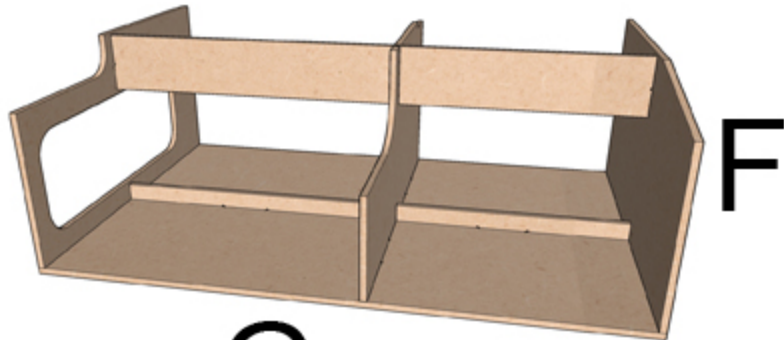

Nudge panels into position so all panels are correctly aligned. Then screw panels together making sure not to over tighten screws.